

I dagsläget har vi stöd för dessa maskiner:

**Star**

- SR-20J
- SR-20R II
- SR-20R III
- SR-32J
- SR-10J
- SB-16/20RE
- SB-16A/C/D/E

**Citizen**

- K16E
- L220
- L20 IX
- L20 X
- L520 VIII
- L20 V
- L12/20 VII
- L32
- L32X (not B axis)
- A-20 VII
- A-20 VI
- A-32
- B-20
- C-16
- D-25

**Tsugami**

- S-206
- S-205
- SS-20
- SS-26
- SS-32
- BE20-V
- B0-125/126
- B0-205 III
- B0-206 III
- B0-265 II
- B0-325B-II
- B0-326 II
- B0-385 II

**Hanwha**

- XP 12/16/20/26
- XD 12/16 III
- XD 20/26 II
- XD 20 V
- XD 32/38 II
- XE 12/16
- XE 20/26/35

**DMG Sprint Linear Series**

- Sprint 20/5
- Sprint 20/8
- Sprint 20/8 Linear
- Sprint 42 Linear

**Swistek**

- RB-20
- RB-20Y
- RB-42Y
- SW-527/528
- AB42

**NOMURA**

- NN32YB3XB

**GANESH**

- Genturn S20Y2
- Cyclone CS-32
- 

**JINN-FA**

- JSL-20RB
- JSL-20RBY